



PANELBOARD

Separating Magnum & Precision Circuit Inc Systems

This procedure separates the Magnum Inverter, Remote, & AGS, from the Precision Circuits Power Control System.


Only two features are lost with this configuration.

- 1. Battery Charger reduction, where the Charger is temporarily reduced during a shore power overload condition.
- 2. Inverter Assist, where the Inverter would come on during shore power overload condition to provide additional power.

Procedure:

- 1. Unplug telecom type cable from J3 (Magnum Remote), the plug closest to the White connector, and plug it into one side of the coupler.
- 2. Unplug telecom type cable from J2, (Magnum Inverter) and plug it into the other side of the coupler.
- 3. Leave J1 telecom type cable going to the Central Monitor panel in place.

Note: Removing the telecom cable going to the Magnum AGS will eliminate Auto Generator Start Feature.

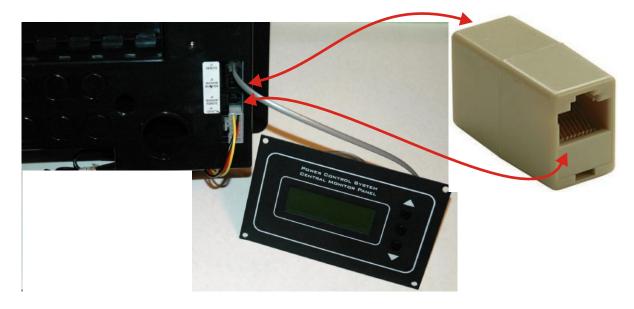

In-Line Modular Coupler (Reverse Configuration for extending voice lines)

5403 Patton Drive Unit 222 Lisle, IL 60532 www.PrecisionCircuitsInc.com 630-240-9832