
PRECISION CIRCUITS INC

00-10026-200 15amps 1/2hp



00-10026-300 15amps 1/2hp

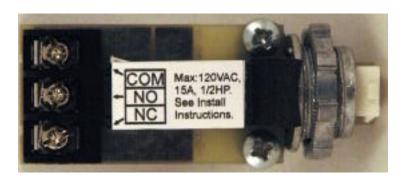

The Relay Module can be used to safely control (on/off) any 120V appliance using 12V signals. The Relay Module is just a simple SPDT relay that has been repackaged, having both Normally Closed (NC) and Normally Open (NO) contacts available through screw terminals. With the Common (COM) and NC contact, connected to a TV, Block Heater or Awning, it can be used as an Ignition Lock-out feature. Using the NO and COM contacts, the Relay module can control a Water Heater or Fireplace.

Key Features:

- 1. UL Listed.
- 2. Safe Isolation of 120V and 12V wiring.
- 3. Can be used in any listed electrical enclosure with a ½" knock-out.





Specifications:					
Part Numbers:	00-10026-200	15 amps 1/2hp	w/Vertice	al Terminals	
	00-10026-300	15 amps 1/2hp	w/Right	Angle Screw Teri	minals
	11-10026-000 Available Pigtail for Low Voltage connector				
		<u> </u>			
Environment:	Indoor, Out of direct weather				
	Must be mounted inside listed electrical enclosure				
Dimensions:	1-1/8" x 1-1/8" x 2-1/4" inside enclosure				
	1" x 1" with 1-3/4" clearance to remove connector outside enclosure				
Mounting Hole:	½" standard electrical knockout				
Low Volt connector	Amp Mini-Universal Mate-N-Lok #172165-1 (Mating connector)				
			·		•
	Min-Ho	ld Min-Op	erate	Typical	Maximum
Relay Coil Volts DC	2.0VD0	9.0V	DC	12.0VDC	16.0VDC
Relay Coil Amps DC				0.03amps	0.1amps
Contact Volts AC Rating				120VAC	
NO & NC Contact Rating Model -200, -300		300	15amps 1/2hp		
Screw Terminals Torque				9-in-lbs	
Screw Terminal Wire Range		22a	wg	12awg	
Ambient Temperature (UL Rated)		-40°	C		+60°C
	,				

Installation:

- 1. Install inside any listed electrical enclosure, ensuring that the Screw Terminal side of the Relay Module is inside the enclosure when complete. Also there must be 1/4" clearance from any part of the module to any adjacent metal walls or exposed electrical conductors. (Clearance to the mounting wall is built into the Relay Module itself).
- 2. Remove 1/2" knock-out in enclosure.
- 3. Remove the supplied lock-nut, install Relay Module through the knock-out hole; from inside enclosure, and reinstall and tighten the lock-nut.
- 4. Wire the appliance to be controlled to the Screw Terminal Block, tightening to the proper torque specification.
- 5. Connect the low voltage wires to the relay coil through the 2 pin connector outside the enclosure.
- 6. Check wiring and cover the enclosure prior to applying power.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to Precision Circuits Inc.

IMPORTANT:

Tighten all electrical connections before energizing. Follow Torque Specifications above



120/240VAC surrounding Relay Module posing potential lethal electrical shock. This equipment should only be serviced by a qualified Service Technician.

